

INSTRUCTIONS FOR USE

Boil Dry Protection

As a protection against overheating, this kettle is fitted with an automatic safety device that will automatically shut the unit off if there is insufficient water in the kettle.

Should this happen, unplug the unit and allow it to cool before refilling it with cold water.

To Clean

Always unplug the unit and remove from the power socket before attempting to clean. Wipe the exterior of the kettle with a clean, soft and slightly damp cloth.

Do not use abrasive cleaning materials.

NEVER IMMERGE the kettle or cord in water or any other liquid.

Inside

Depending on the nature of the water supply, the inside of the kettle may need to be descaled and cleaned regularly using kettle cleaner / descalers that are available from supermarkets, chemists or other stores. Alternatively, the methods described below may be used.

Note: The warranty will not cover kettles damaged by not descaling.

Discolouration of the internal part of the kettle due to water conditions in your area will not be regarded as a malfunction.

Descaling

Descal your kettle in the following manner:

- Fill the kettle with ½ litre of white vinegar.
- Leave to soak for 1 hour without boiling.
- Empty your kettle and rinse it two or three times with clean water.

User Maintenance

This kettle requires little maintenance. It contains no user serviceable parts. Do not try to repair it yourself. Refer it to qualified personnel if servicing is required. If the supply cord is damaged, it must be replaced by the manufacturer or its service agents.

If the appliance is not operating correctly, please check that:

- You have followed the instructions
- The wall outlet is switched ON

How To Use

- Adjust the length of the power cord by hooking the excess under the power base.
- The kettle may be filled through the spout or with the lid open. NEVER fill the kettle with anything other than water (except when descaling).
- NEVER fill the kettle past the MAX mark as it may eject boiling water

CAUTION: Never fill the kettle while it is connected to the power socket.

- Close the lid making sure that it is firmly in place.
- Plug the cord into a 230V outlet away from hot or heated surfaces.
- Press the ON/OFF switch down. The water will start heating and the kettle will switch off automatically when the water boils returning the switch to the OFF position.
- If required, the water may be brought back to boil by waiting 10 to 20 seconds and then pressing the switch down again.

IMPORTANT SAFEGUARDS

When using any electrical appliance, basic safety precautions should be followed including the following:

1. Please read the instructions carefully before using any appliance.
2. Always ensure that the voltage on the rating label corresponds to the mains voltage in your home.
3. Incorrect operation and improper use can damage the appliance and cause injury to the user.
4. The appliance is intended for household use only. Commercial use invalidates the warranty and the supplier can not be held responsible for injury or damage caused when using the appliance for any other purpose than that intended.
5. Avoid any contact with moving parts.
6. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
7. Children should be supervised to ensure that they do not play with the appliance.
8. Check the power cord and plug regularly for any damage. If the cord or the plug is damaged, it must be replaced by the manufacturer or a qualified person in order to avoid an electrical hazard.
9. Do not use the appliance if it has been dropped or damaged in any way. In case of damage, take the unit in for examination and/or repair by an authorised service agent.
10. To reduce the risk of electric shock, do not immerse or expose the motor assembly, plug or the power cord to water or any other liquid.

11. Never immerse the unit in water or any other liquid for cleaning purposes.
12. Remove the plug from the socket by gripping the plug. Do not pull on the cord to disconnect the appliance from the mains. Always unplug the unit when not in use before cleaning or when adding or removing parts.
13. The use of accessory attachments that are not recommended or supplied by the manufacturer may result in injuries, fire or electric shock.
14. A short cord is provided to reduce the hazards resulting from becoming entangled in or tripping over a longer cord.
15. Do not let the cord hang over the edge of a table or counter. Ensure that the cord is not in a position where it can be pulled on inadvertently
16. Do not allow the cord to touch hot surfaces and do not place on or near a hot gas or electric burner or in a heated oven.
17. Do not use the appliance on a gas or electric cooking top or over or near an open flame.
18. Use of an extension cord with this appliance is not recommended. However, if it is necessary to use an extension lead, ensure that the lead is suited to the power consumption of the appliance to avoid overheating of the extension cord, appliance or plug point. Do not place the extension cord in a position where it can be pulled on by children or animals or tripped over.
19. This appliance is not suitable for outdoor use. Do not use this appliance for anything other than its intended use.
20. DO NOT carry the appliance by the power cord.
21. Do not leave this appliance unattended during use. Always unplug the unit when not in use or before cleaning.
22. Always operate the appliance on a smooth, even, stable surface. Do not place the unit on a hot surface.
23. Ensure that the switch is in the "Off" position after each use.
24. The manufacturer does not accept responsibility for any damage or injury caused by improper or incorrect use, or for repairs carried out by unauthorised personnel.
25. In case of technical problems, switch off the machine and do not attempt to repair it yourself. Return the appliance to an authorised service facility for examination, adjustment or repair. Always insist on the use of original spare parts. Failure to comply with the above mentioned pre-cautions and instructions, could affect the safe operation of this machine.
26. Don't open the lid while the water is heating.
27. Don't put the kettle, cable, or plug in any liquid; don't use the kettle in a bathroom, near water, or outdoors.

28. Don't touch hot surfaces. Use the handle and lid.
29. Take care when pouring – pour slowly, and don't over-tilt the kettle.
30. The scald hazard lasts long after boiling. Keep the kettle and cable away from the edges of worktops and out of reach of children.
31. Route the cable so it doesn't overhang and can't be tripped over or caught.
32. Unplug the kettle when not in use, before moving and before cleaning. Let the kettle cool down before cleaning and storing away.
33. Check the lid is fully closed before switching the kettle on, otherwise it may not switch off.
34. Don't switch on unless the kettle contains at least 2 cups of water.
35. Don't fill past max, or it may spit boiling water.
36. Unplug the kettle from the mains before filling or pouring.
37. Keep the kettle, cable and plug away from sources of heat.
38. Don't use the kettle for any purpose other than heating water.
39. This appliance must not be operated by an external timer or remote-control system.